GENERAL MAINTENANCE

Daily

- 1. Check State of Charge (ensure battery is sufficiently charged)
- 2. Check headlights, turn signals, brake lights, and brakes.

Monthly

- 1. Check the tire pressures. Tires are factory filled with nitrogen.
- 2. Inspect all power cables for any signs of damage.
- 3. Check coolant levels.

For more information Contact your local dealer



Scan for a .pdf of this Ouick Start Guide




2023 AYRO

QUICK START GUIDE



OPERATION

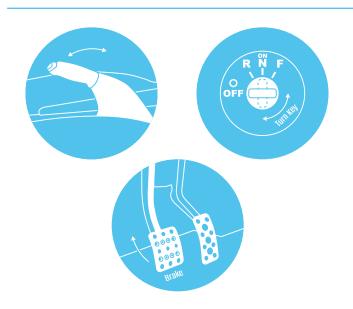

- 1. Inspect before each use (360° visual).
- 2. Enter vehicle; close doors (if equipped). Buckle up!
- 3. With park brake engaged (up position), insert the key and turn to «N» (NEUTRAL/ON).
- 4. Allow the Driver Display to illuminate.
- 5. Release the park brake, turn the key to «F» (FORWARD) or «R» (REVERSE), and proceed.
- 6. To park, stop with the brake pedal fully depressed, pull up the park brake, turn the key to «OFF», and remove the key.

BATTERY MAINTENANCE

- Charging and maintenance directly affect your battery life. Plug it in!
- When you are finished for the day, plug it in.
 NEVER let the battery drop down to zero charge. Ideally, keep it above 50%. Plug it in!
- When it is cold outside, plug it in. Charging warms the battery.
- Store your Vanish inside (garage, vehicle shop, etc.) when at or below freezing or in very hot weather.
- Moderate acceleration and braking prolong battery range and life.

